




DC-T Series

Installation Manual


DC-T1232WR / DC-T1234WR / DC-T1233WHR

Before reading this manual



This is a basic installation manual for use of an IDIS network camera. Users who are using this product for the first time, as well as users with experience using comparable products, must read this manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this manual, keep it at an easily accessible location for future reference.

-  The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this manual.
- The information in this document is believed to be accurate as of the date of publication even though explanation about some functions may not be incorporated. The manufacturer is not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.
- It is recommended that first-time users of this network camera and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

Safety Symbols

Symbol	Publication	Description
	IEC60417, No.5031	Direct current

In-Text

Symbol	Type	Description
	Caution	Important information concerning a specific function.
	Note	Useful information concerning a specific function.

Safety Precautions

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Placing and Accessories

Do not place this equipment on an wall or ceiling that is not strong enough to sustain the camera. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment in an enclosed space. Sufficient ventilation is required to prevent an increase in ambient temperature which can cause malfunction or the risk of fire.

7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

This equipment should be remain readily operable.

8. Power Cord

Operator or installer must remove power and TNT connections before handling the equipment.

9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges. If thunder or lightning is common where the equipment is installed, use a surge protection device.

10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or the plug has been damaged.
- If liquid is spilled, or objects have hit the equipment.
- If the equipment has been exposed to rain or water.
- If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- If the equipment has been dropped, or the cabinet damaged.
- When the equipment exhibits a distinct change in performance — this indicates a need for service.

14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Replace only with the same or equivalent type. Dispose of used batteries according to the instructions.

The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Copyright

© 2015 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this manual.

Use or duplication of this manual in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this manual are subject to change without prior notice for reasons such as functionality enhancements.

Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

This product contains software built partially on open-source content. Codes for the corresponding open-source content are available for download. For more information, refer to the software CD (OpenSourceGuide\OpenSourceGuide.pdf) or the open source guide accompanying this manual.

Table of Contents

1

Part 1 – Introduction..... 6

- Product Features6
- Accessories.....8
- Overview9
 - Body.....9
 - Cable10
 - Factory Reset12
- Installation12
 - Installation.....12
 - Dimensions12

2

Part 2 - Camera Connection 13

- With DirectIP™ NVR-based Layout.....13
- With non DirectIP™ NVR-based Layout15

3

Part 3 - Appendix..... 17

- Troubleshooting17
- Specifications18

Part 1 – Introduction

Product Features

DC-T1232WR / DC-T1234WR / DC-T1233WHR models

are IP-based network cameras that compress and transmit video over ethernet.

You can use the IDIS Discovery program to change network camera settings or the IDIS Solution Suite Compact program to manage multiple network cameras. In addition, the embedded web server (IDIS Web) lets you remotely view live video using a web browser. In addition, you can use the IDIS Solution Suite Compact to manage network cameras and view/record video.



In this manual, the term **Remote System** refers to the computer on which the remote program (IDIS Solution Suite Compact or IDIS Web) is running.

- Supports 4-stage video compression rate and multiple compression resolutions
 - Two-way audio communication support for remote audio dialog *DC-T1233WHR only*
 - Video stream buffering to counter pre-/post-event buffering and network delays for improved network recording reliability
 - Remote monitoring via web browser or remote software
 - Automatic web casting code (HTML) generation
 - Up to 10 simultaneous remote monitoring connections
 - IP filtering, HTTPS, SSL, IEEE 802.1X, and configurable user authority levels for greater security
 - Network bandwidth limitation and MAT features for more efficient use of network bandwidth
- Supports DirectIP mode working with a DirectIP™ NVR that allows users to simply set up all required configurations without a PC
 - Supports ONVIF protocol (Core specification version 1.02)
 - Multi-streaming for high-resolution and high-quality video monitoring and simultaneous recording in real-time as well as flexible configurations for those
 - Supports H.264 video compression and M-JPEG still image compression algorithms

- Easy network access via UPnP (Universal Plug and Play) function and embedded mDNS (Multicast DNS) protocol
 - Wide dynamic range compensation (Digital WDR) for improved video quality in high-contrast situations
 - Slow shutter support for improved low-lighting video capture performance
 - Day & Night feature (built-in IR cut filter changer)
 - Motion detection by PIR (Passive Infrared) sensor *DC-T1234WR only*
 - Optical zoom functionality with an optical zoom lens
 - Auto focus functionality
 - Video out feature (selectable NTSC/PAL)
 - Quick and easy firmware upgrade over the network
 - Redundant firmware and auto recovery features for improved system stability
 - Network-based integrated management of multiple network cameras
- Multiple event detection modes: Alarm-In (*DC-T1233WHR only*), Motion Detection, Trip Zone, Audio Detection, and Tampering
 - Supports 12 VDC and PoE (Power over Ethernet)
 - Built-in heater allowing operation in a sub-zero temperature (*DC-T1233WHR only* using 12 VDC power)



 
Remote monitoring and recording via multistreaming are available using the IDIS Solution Suite Compact program. For more information on using IDIS Solution Suite Compact, refer to its **operation manual**.




There is a limit to the number of users allowed to connect remotely via the Internet at the same time.

Accessories


Upon purchasing the product, check inside the box to make sure all the following accessories are included. External appearances and colors of the accessories may vary depending on the model.

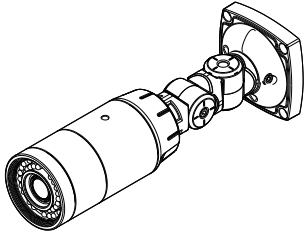


Network Camera

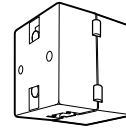 


Ferrite Core

 


Mounting Bracket

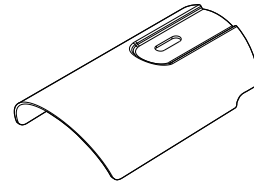 

Camera Sun Shield

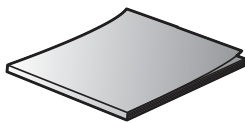 

Open Source Guide

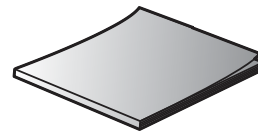 


Quick Guide



Allen Wrench



 Sun Shield Screw, O Ring (1 ea.)

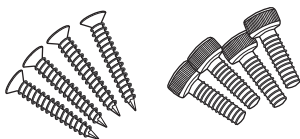


Screws (4 ea.)

Overview



Product color and design may vary depending on the model.

 Body

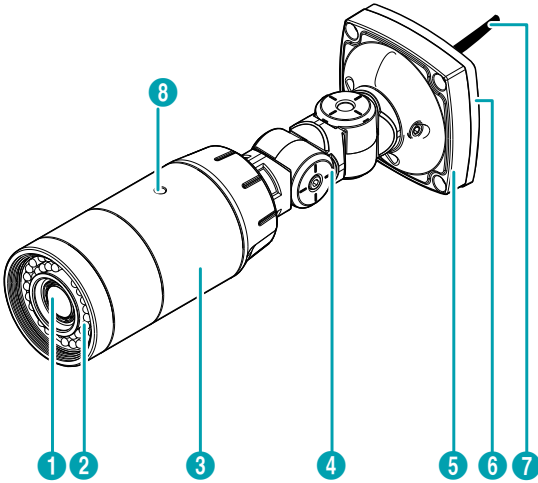

1	Lens
2	IR LED
3	Body
4	Stand
5	Bottom Cover
6	Mounting Bracket
7	Cable
8	Sun Shield Screw Hole

- **Lens**

Optical zoom lens is installed.

- **IR LED**

A sensor in the bottom middle monitors lighting levels and activates the IR LED during low-lighting conditions. The PIR (Passive Infrared) sensor in the upper middle of IR LEDs detects motions by detecting infrared radiation changes at night or under low lighting conditions (*DC-T1234WR only*). The motion detection by the PIR sensor activates alarm out according to the settings of Alarm Out (**Remote Setup > Event Action > Alarm Out**), and the white LEDs which are at the left and right middle of IR LEDs are lit while the alarm out is activated.

- **Body**

The cables are connected through the stand.

- **Stand**

Allows you to adjust the camera direction and lens' rotation angle. Twist the setscrews counterclockwise and move the camera to the desired direction. Once it is set, twist the setscrews clockwise to lock it.

- **Bottom Cover**

Allows you to mount the camera to the wall or ceiling using the mounting bracket provided with the camera.

- **Mounting Bracket**

Allows you to mount the camera to the wall or ceiling.

- **Cable**

 
Refer to the **Cable**.

- **Sun Shield Screw Hole**


Allows you to screw the sun shield to the camera.

Cable


DC-T1233WHR model

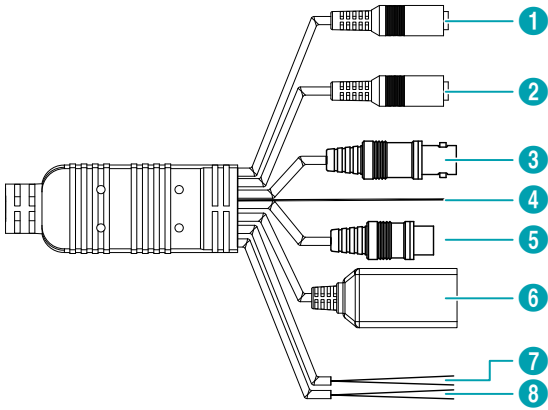

DC-T1234WR model

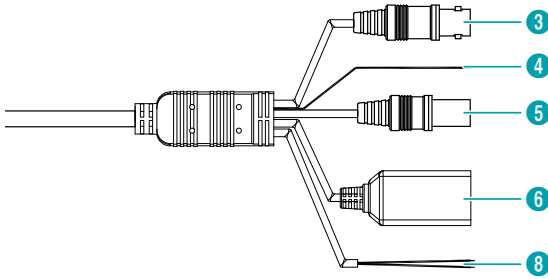 

DC-T1232WR model

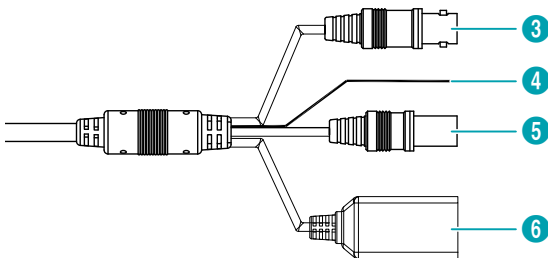 

①	Audio Out (Red Cable)
②	Audio In (White Cable)
③	BNC Video Out (Yellow Cable)
④	FGND
⑤	Power In (Red Cable)
⑥	Network Port
⑦	Alarm In
⑧	Alarm Out

• **Audio Out**

Connect an amplifier to this port (line out). This device does not feature a built-in audio amplifier unit and therefore requires the user to purchase a separate speaker system with a built-in amplifier.

• **Audio In**

Connect an audio source to this port. (line in)

• **Video Out (BNC)**

Connect the monitor. Use these ports for previewing video and not monitoring video.

• **FGND (Frame Ground)**

Used to ground the device.

• **Power In**

Connect to the power adapter (12 VDC).

• **Network Port**

Connect a network cable with an RJ-45 connector to this port. If using a PoE switch, you can supply power to the camera using an ethernet cable. For more information on PoE switch use, refer to the switch manufacturer's operation manual. You can configure, manage, and upgrade this camera and monitor its images from a remote computer over the network. For more information on network connection setup, refer to the **IDIS Discovery operation manual**.

• **Alarm in**

Connect an alarm-in device to this port. Connect a mechanical or electrical switch to the IN and GND (ground) connectors. Alarm in range is 0V to 5V. In order to detect alarm input from an electrical switch, the signal must be higher than 4.3V from an NC switch or less than 0.3V from an NO switch and must last for longer than 0.5 seconds.

 
• **Alarm Out**

If the camera is *DC-T1234WR*, connect an alarm out device's mechanical or electrical switch to the OUT+ and the OUT- connectors. (Supported Types: NO (Normally Open), Electrical Specs: 0.3A sync current at 125 VAC, 1A sync current at 30 VDC)


If the camera is *DC-T1233WHR*, it is the BJT (Bipolar Junction Transistor) - open collector output. If the voltage and current exceed the specification limit (max. load: 50mA, max. voltage: 30VDC), the product could be damaged. When connecting the device which exceeds the specification limit, refer to the picture (circuit) below



If used with an external inductive load (e.g. relay), a diode must be connected in parallel with the load for protection. Otherwise, the product could be damaged. *DC-T1233WHR*

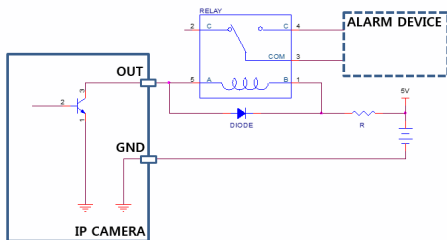

- Check your local laws and regulations on making video or audio recordings. The user will be held liable for any violation of the law. (Article 25-5 of the Personal Information Protection Act: Operators of image data processing devices may not operate such devices for purposes other than as originally intended during device installation, place such devices at locations other than as originally intended, or use such devices to record audio.)
- When switching over from 12 VDC to PoE as the power source, the system will be rebooted once the power adapter is disconnected.
- Organize the power cable so that it will not cause people to trip over or become damaged from chairs, cabinets, desks, and other objects in the vicinity. Do not run the power cable underneath carpet or a rug or plug the cable into a power outlet shared by a number of other devices.
- Wrap the camera-end of the network cable twice around the provided ferrite core (28A2024-0A2, Laird Technologies) to subdue electromagnetic wave generation.

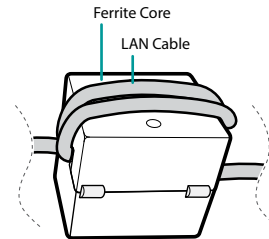 

- The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

Factory Reset

This will only be performed remotely on the rare occasions that you want to return all settings to the original factory settings. Refer to the **IDIS Discovery operation manual** for details on remote factory resetting.



A factory reset will clear all camera settings configured by the user.

- 1 Screw the camera sun shield to the camera using the screw and rubber provided with the camera.
- 2 Screw the mounting bracket to the wall or ceiling by using screws provided with the camera.
- 3 Screw the bottom cover to the mounting bracket by using screws provided with the camera.
- 4 Adjust the camera angle by bending the stand.
- 5 Connect external devices, network and power adapter.
- 6 Apply power.

Installation

Installation of this product does not require the use of special tools.

For more information on other devices comprising the overall system, refer to their respective **installation manuals**.

 


Product color and design may vary depending on the model.



Installation



Check the wall or ceiling to see if it needs to be reinforced. The camera may fall off if the wall or ceiling is not strong enough to support its weight.

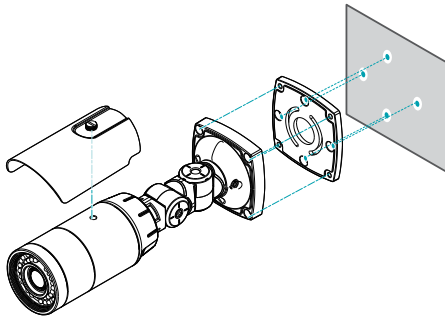

Dimensions

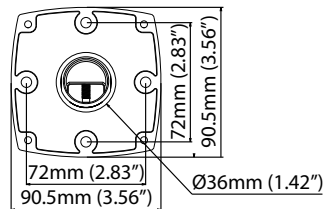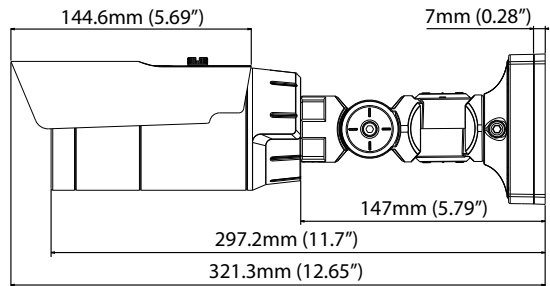  


Part 2 - Camera Connection


Use the camera by connecting to DirectIP™ NVR or non DirectIP™ NVR, VMS such as IDIS Solution Suite Compact.

With DirectIP™ NVR-based Layout

 DC-T1232WR model

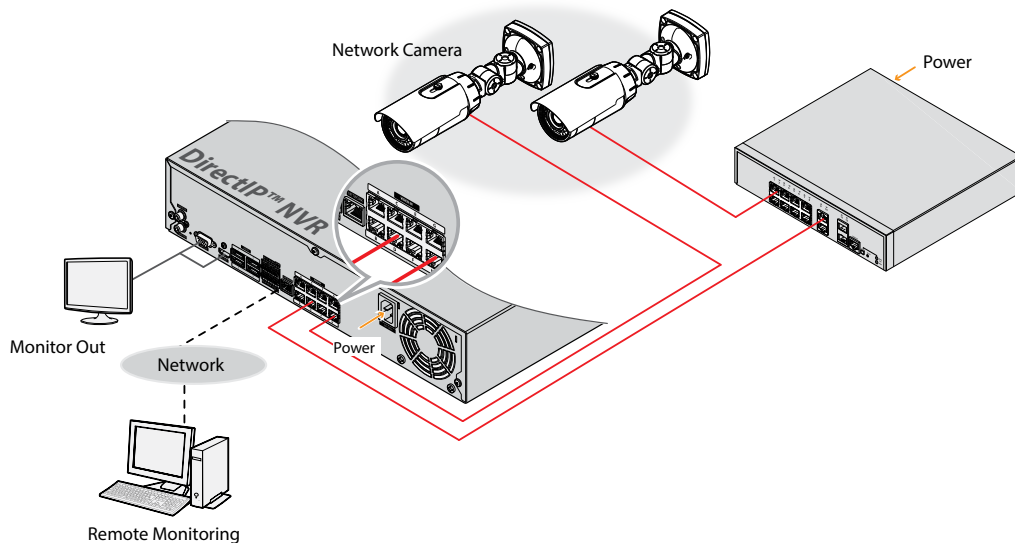


DC-T1234WR model

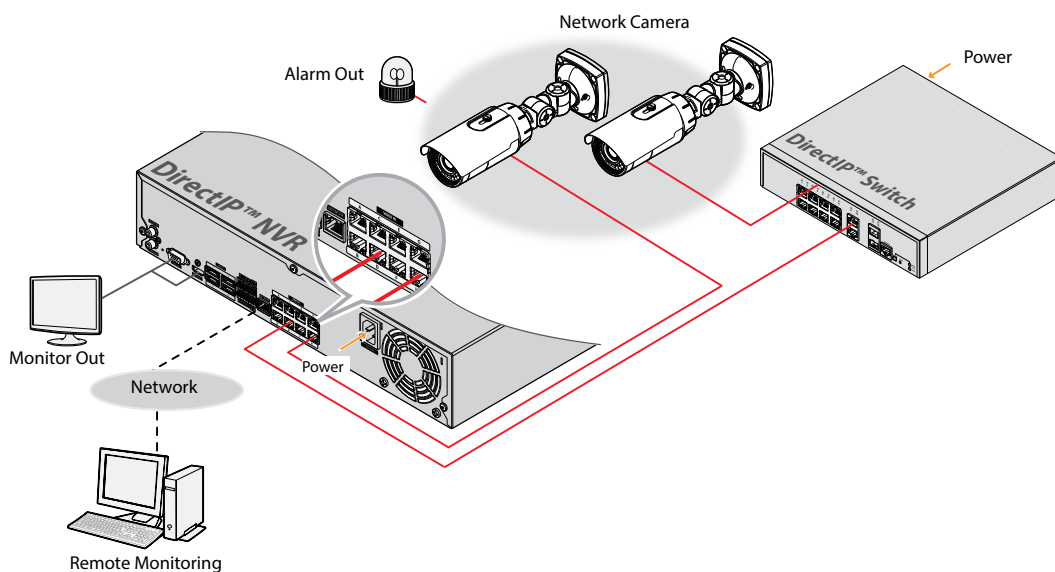 

Part 2 - Camera Connection

 DC-T1233WHR model

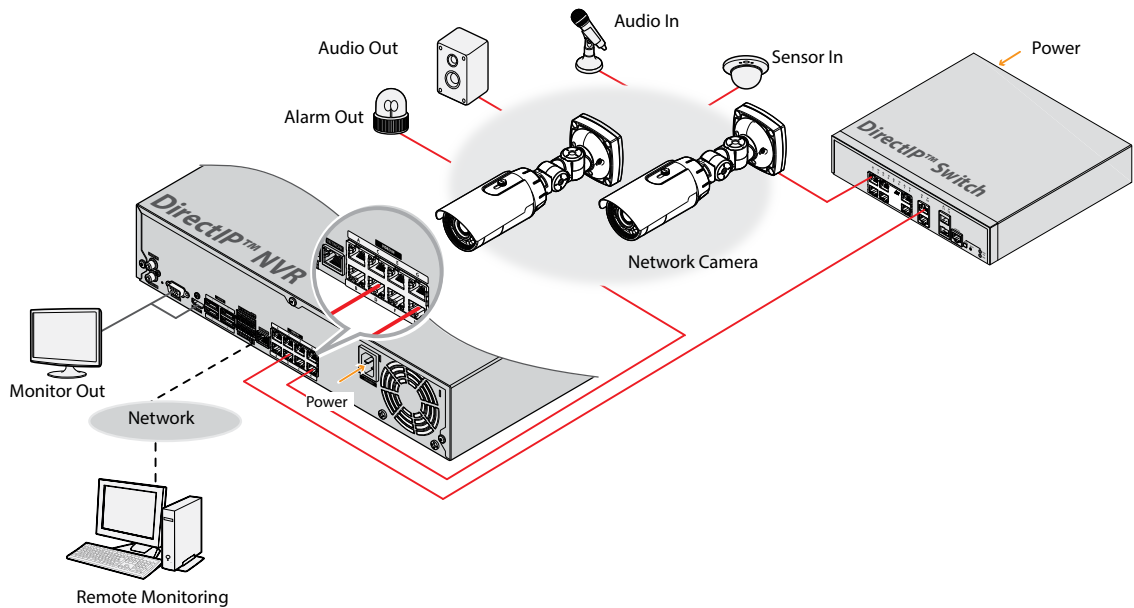


DirectIP™ NVR makes it easy to use cameras without extra network configurations. Each camera can be controlled via the DirectIP™ NVR setup menu, without any PC. For detailed camera settings, please see the camera setting pages of DirectIP™ NVR manual.


For users using the camera with DirectIP™ NVR connection, do not need to consider contents in the camera operation manual.

With non DirectIP™ NVR-based Layout

 
DC-T1232WR model

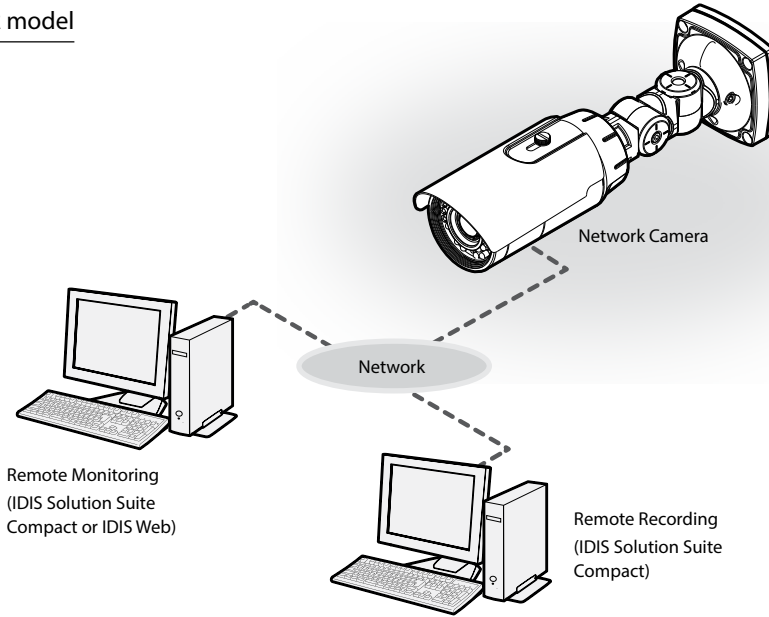

DC-T1234WR model

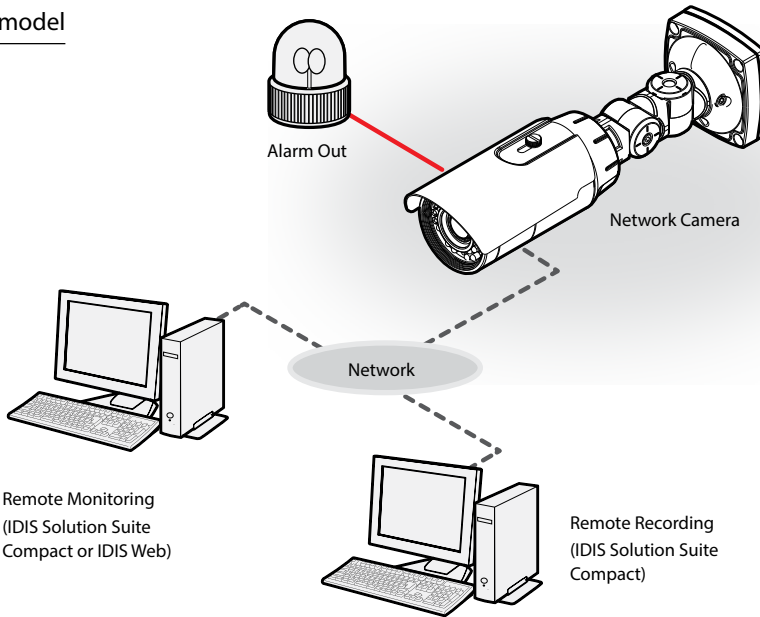 

DC-T1233WHR model

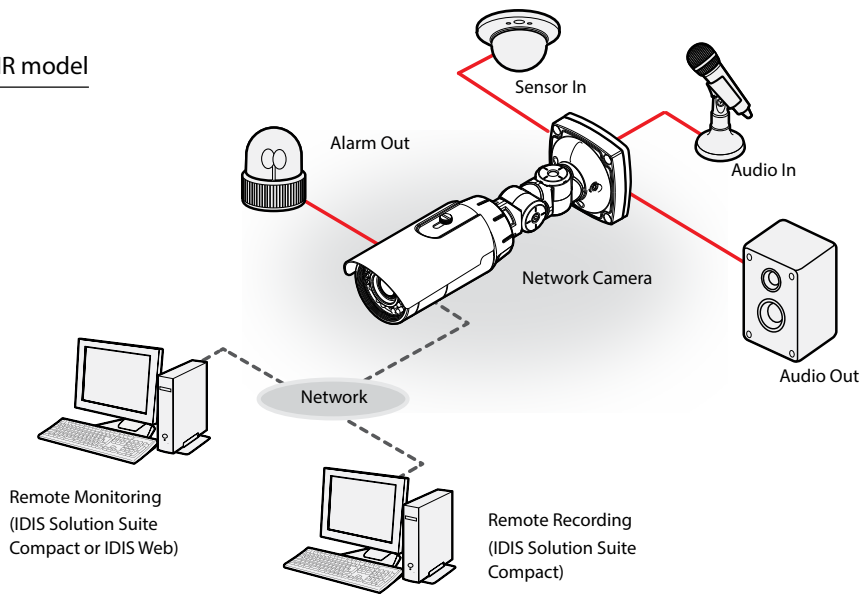 

Control the camera over the network from software installed on a computer.
Ideal for using the camera over the network from a remote location.

The contents in the camera operation manual are only for users using the camera with non DirectIP™ NVR connection or VMS connection such as IDIS Solution Suite Compact.

Part 3 - Appendix

Troubleshooting

Problem	Check
The main unit won't turn on.	<ul style="list-style-type: none">• Check the power cable connection.• Check the power outlet.
I can't see Live videos.	<ul style="list-style-type: none">• Check the camera's power status.• Check the network connection status of the computer and the network camera.
Images are blurry.	<ul style="list-style-type: none">• Make sure the lens is clean. If not, clean it using a soft piece of cloth or a brush.• Make sure the lens is in focus.• If there is too much light coming into the camera or the camera is picking up an overly bright light source, adjust the camera's position/angle accordingly.
Video color appears incorrect.	Check the white balance settings. If using the Auto option, it may take some time for the white balance to be adjusted.
Images are blinking.	If the camera is pointed at the sun or a fluorescent lamp, adjust the camera's angle away.
Lost the admin ID and password and unable to connect to a network camera.	Ask your dealer or distributor.
Unable to launch IDIS Web.	If the IDIS Web login screen is not loading, check which version of Microsoft Internet Explorer you are using. IDIS Web may not launch properly on versions 8.0 or below.

Specifications



These product specifications may change without prior notice.

Lens

Lens Type	Motorized vari-focal lens
Focal Length	F1.3, F=3.3 mm to 10.0 mm
Viewing Angle	H: 99.8° (Wide) to 33.5° (Tele) V: 52.2° (Wide) to 18.6° (Tele) D: 118.2° (Wide) to 38.3° (Tele)
Lens Iris Control	DC auto iris

Camera

Image Sensor	1/2.8" CMOS	
Minimum Subject Lux	COLOR: 0.1 lux F1.3 BW: 0 lux F1.3 (IR LED On)	
Scanning Method	Progressive scan	
Signal-to-Noise Ratio	> 31.2 dB	
Dynamic Range (Digital WDR)	> 74.7 dB	
Electronic Shutter	Auto	
IR LED	DC-T1233WHR / DC-T1232WR	LED x 42 (850 nm)
	DC-T1234WR	LED x 24 (850 nm)
White LED*	LED x 6	
Lighting Sensor	Supported	
IR Range	30 m (outdoor)	

* It is supported for the *DC-T1234WR* only.

Video

Compression Algorithm	H.264, M-JPEG (Four levels)
Compression Resolution	352x240, 704x480, 1280x720, 1920x1080
Bitrate Control	H.264 –CBR / VBR (up to 12 Mbps)
Max. Transmission Rate (frames per second)	30 ips @ 1920x1080 + 4 ips @ 1920x1080
Multi-Stream	Primary, Secondary, Tertiary

Audio

Compression Algorithm*	G.726 (8KHz), G.711 μ – Law (8KHz), ADPCM (16KHz)
-------------------------------	---

* It is supported for the *DC-T1233WHR* only.

I/O

Video Out**	1 Composite, 1 Vp-p	
Audio In**	1 Line In	
Audio Out**	1 Line Out	
Alarm In**	1 TTL, NC/NO programmable, 4.3V (NC) or 0.3V (NO) threshold, 5 VDC	
Alarm Out***	DC-T1233WHR	1 TTL open collector, max. load: 50mA, max. voltage:30VDC
	DC-T1234WR	1 relay out, NO only, 0.3A @ 125 VAC, 1A @ 30 VDC
Network Connection	10/100 Mbps Ethernet	

* Use these ports for previewing video and not monitoring video.

** It is supported for the *DC-T1233WHR* only.

*** It is supported for the *DC-T1233WHR / DC-T1234WR* only.

Connector

Video Out*	BNC
Audio I/O**	Φ 3.5 audio jack
Alarm In**	Wires
Alarm Out***	Wires
Ethernet Port	RJ-45

* Use these ports for previewing video and not monitoring video.

** It is supported for the *DC-T1233WHR* only.

*** It is supported for the *DC-T1233WHR / DC-T1234WR* only.

General

External Dimensions (W x H x D)	11.43" x 3.5" x 3.5" (290.2mm x 90.5mm x 90.5mm)	
Weight (Main Unit)	2.6 lbs. (1.17kg)	
Boot up temperature*	DC-T1234WR, DC-T1232WR	32°F to 122°F (0°C to 50°C)
	DC-T1233WHR	32°F to 122°F (0°C to 50°C) [-4°F to 122°F (-20°C to 50°C) when the heater is operating]
Working Temperature*	DC-T1234WR, DC-T1232WR	14°F to 122°F (-10°C to 50°C)
	DC-T1233WHR	14°F to 122°F (-10°C to 50°C) [-40°F to 122°F (-40°C to 50°C) when the heater is operating]
Operating Humidity	0% ~ 90%	
Power Input*	12VDC, PoE(IEEE 802.3af, Class3)	
Power Consumption*	DC-T1233WHR**	Max. 9.24W (IR LED ON) (Max. 17.4W when the heater is operating) (When the lens moves, 180mW is added.)
	DC-T1234WR	Max. 7.2W (When the lens moves, 180mW is added.)
	DC-T1232WR**	Max. 9.24W (When the lens moves, 180mW is added.)
Certifications	FCC, CE, UL***, IP66	

* Heater operates only when the 12 VDC power is applied. *DC-T1233WHR only*

** This product is intended to be supplied by a Listed Power Supply Unit marked "Class2" and rated from 12 VDC, min. 3A.

** Overvoltage Category I, Pollution Degree 2

*** Not applies to *DC-T1234WR* model.

*** CAUTION: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions. This equipment is indoor use and all the communication wiring are limited to inside of the building.



IDIS Co., Ltd.

For more information, please visit at
www.idisglobal.com